

NATHAN ANTHONY®

MADE IN CALIFORNIA

UPHOLSTERED BED – ASSEMBLY INSTRUCTIONS

TOOLS NEEDED:

1. Two people
2. (1) Gear wrench
 - a. 1/2" Drive tear drop ratchet
 - b. 3/8" Drive 9/16" 6-point SAE deep socket



PARTS INCLUDED:


- (1) Head board
- (2) Upholstered side rails
- (1) Upholstered foot rail or footboard
- (3) Wood slats with center feet for support (do not remove slats, or bed will sag after use)
- (2) upholstered bunky boards with fabric handles (for platform beds only)




For questions call 323-584-1315 or email us: contact@nafurniture.com

ASSEMBLY INSTRUCTIONS:

1. Stand headboard up against wall where it will be placed
2. Connect each side rail to headboard
3. Connect foot rail to each side rail
4. Place wood center slats into notched areas in the interior cavity (for beds requiring mattress and boxspring)
5. Place (upholstered) bunky boards on top of center slats (for platform beds with mattress only)
6. Legs will be attached to rails with the exception of a few designs where the legs are packaged separately for you to assemble.
7. Place mattress on bed

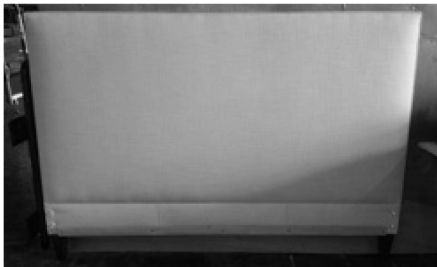

- ① Stand headboard up against wall where it will be placed

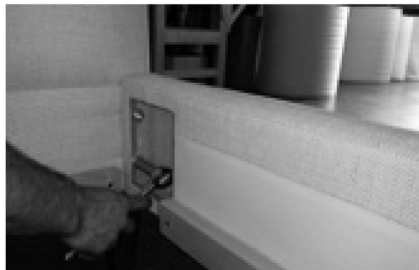

- ② Connect each side rail (2 included) to headboard



- ③ Connect foot rail to each side rail



- ④ Place wood center slats (3 included) into notched areas in the interior



- ⑤ Place (upholstered) bunky boards on top of center slats (for platform beds only)